


## CONNECTION WITH TRANSMITTER

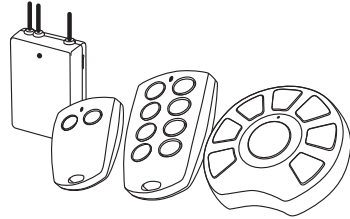

**Step 1**  
On the transmitter, quickly apply 5 short presses to the pushbutton you wish to connect. The transmitter LED will start flashing for 20 seconds, indicating that it is waiting for a connection.

**Step 2**  
While the transmitter LED flashes, quickly touch the tab "connect" on the receiver (located on the top of the casing). If the connection is successful, the receiver LED flashes once and the transmitter LED stops flashing.  
(Warning: The receiver must be powered).

## DURATION CONFIGURATION

Number of Presses (1)	Duration (4)	Reply (2)
11	2 minutes	1 flash
12	4 minutes	2 flashes
13	8 minutes	3 flashes
14	15 minutes	4 flashes
15	30 minutes	5 flashes
16	60 minutes (1 hour)	6 flashes
17	120 minutes (2 hours)	7 flashes
18	240 minutes (4 hours)	8 flashes
19	unlimited	9 flashes

(1) short quick presses on the transmitter pushbutton or on module connector.

(2) confirmation reply with flashes or relay 'clicking' after presses.

## FUNCTION CONFIGURATION

Number of Presses (1)	Function	Reply (2)
20	Relay mode (no dimmer functionality)	10 flashes
21	Configuration lock	1 flash
22	Flashing mode (3)	2 flashes
23	Configuration release (with automatic reset after one hour)	3 flashes
24	Shut-off warning advice (3)	4 flashes
25	Set duration in seconds (4)	5 flashes
26	Set duration in minutes (4)	6 flashes
27	Minimum brightness adjustment	7 flashes
28	Reset default minimum brightness	8 flashes
29	100% mode or memory upon first press	9 flashes
30	Full reset to default values	2 flashes
35	Power failure status back-up (3)	5 flashes

(3) it alternatively switches function between OFF and ON (disabling and enabling).

(4) duration can be set in minutes (default) or seconds.

## WIRING WITH NEUTRAL OF A MTV500ER RADIO DIMMER

