


Wiring of a staircase light electronic timer with anti-jam option

3-WIRE WIRING, WITH PUSHBUTTON COMMON TO NEUTRAL

ANTI-JAM OPTION

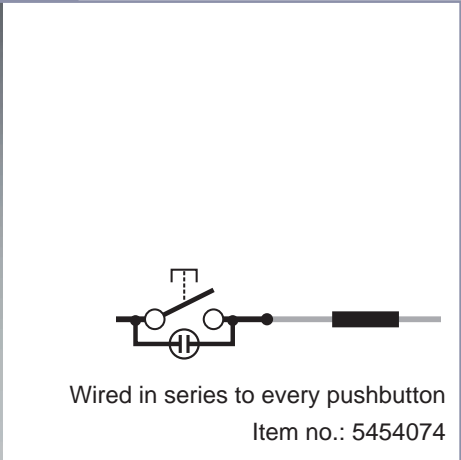

MTM2000 MODULE PREPARATION

During a first step, module can be configured in laboratory through a temporary button and temporary bulb. Then, during a second step, you can proceed to installation.

Module configuration will be kept even in case of power supply failure.

- 1 – Unlock module with 23 short presses (answer: 3 flashes and relay "clicking")
- 2 – Then configure module in timer mode with 27 short presses (answer: 7 flashes and relay "clicking").
- 3 – Then configure timer duration with 11,12, 13, 14, 15, 16, 17 or 18 short presses to get a duration of 2,4,8,15,30,60,120 or 240 minutes.

ANTI-JAM OPTION ENABLING

Each button must feature the accessory YOKIS R1500 (Part no. 5454074), wired in series with button. To enable the anti-jam function: make 20 short presses.

